NURIT TERMINAL QUICK REFERENCE GUIDE

For the next following procedures, please keep in mind the displays for the 2090 and 3010 will vary because of the size of the display screen. However, all procedures are the same for the NURIT 2060 / 2070 / 2080 / 2085 / 2090 / 3000 / 3010. Use the *<FORCED>* key to scroll through the different options.

CREDIT CARD SALE

TERMINAL DISPLAY	ACTION
"CREDITSALE ACCOUNT ?"	Swipe the credit card, or manually key in the account number and expiration date.
"CREDITSALE AMOUNT?"	Enter amount of sale (no need to press decimal).
"DIALING, PROCESSING, APPROVED"	Terminal returns to original prompt, "CREDITSALE, ACCOUNT?"

CREDIT CARD SALE (WITH AVS OPTION)

TERMINAL DISPLAY	ACTION
"CREDITSALE	Swipe the credit card, or manually key in the account number and
ACCOUNT ?"	expiration date.
"CREDITSALE	Enter amount of sale (no need to press decimal).
AMOUNT?"	
"ENTER ZIP CODE"	Enter customer's zip code (billing address).
"P.O.B or HOUSE #"	Enter number address only.
"DIALING, PROCESSING, APPROVED"	Terminal returns to original prompt, "CREDITSALE, ACCOUNT?"

CREDIT CARD RETURN

TERMINAL DISPLAY	ACTION
"CREDITSALE ACCOUNT ?"	Press the <return> key.</return>
"CREDIT RETURN ACCOUNT?"	Swipe the credit card, or manually key in the account number and expiration date.
"CREDIT RETURN AMOUNT?"	Enter amount of return (no need to press decimal) and press <enter>.</enter>
"ENTER AUTH. NO"	Type in authorization code on the original sale receipt and <enter>.</enter>
"DIALING, PROCESSING, APPROVED"	Terminal returns to original prompt, "CREDIT SALE, ACCOUNT?"

VOID

TERMINAL DISPLAY	ACTION
"CREDITSALE ACCOUNT ?"	Press the <void> key. The following transactions can be voided: CREDIT CARD SALE, FORCED SALE, RETURN</void>
"CREDIT VOID/SALE ACCOUNT?"	Swipe the credit card, or manually key in the account number and expiration date.
"CREDIT VOID/SALE AMOUNT?"	Enter amount of void (no need to press decimal) and press <enter>.</enter>
"APPROVED OFF LINE"	Terminal returns to original prompt

DEBIT CARD SALE

TERMINAL DISPLAY	ACTION
"CREDITSALE ACCOUNT ?"	Press <enter> until terminal displays the following prompt</enter>
"DEBITSALE ACCOUNT?"	Only swipe a debit card (it cannot be keyed in manually).
"DEBITSALE, AMOUNT?"	Enter amount of sale (no need to press decimal).
"CASH BACK 0.00?"	Enter amount of cash back, or press <enter> to bypass.</enter>
"DIALING, PROCESSING, APPROVED"	Tear slip and have customer sign receipt.

NURIT TERMINAL QUICK REFERENCE GUIDE

FORCED CREDIT CARD SALE

TERMINAL DISPLAY	ACTION
"CREDITSALE, ACCOUNT ?"	Press the <forced> key.</forced>
"CREDITFORCED, ACCOUNT?"	Swipe the credit card, or manually key in the account number and expiration date.
"CREDITFORCED, AMOUNT?"	Enter amount of sale (no need to press decimal).
"ENTER AUTH. NO"	Enter authorization number obtained through voice auth.
"APPROVED OFF LINE"	Tear slip and have customer sign receipt.

CHECK SALE

TERMINAL DISPLAY	ACTION
"CREDITSALE, ACCOUNT ?"	Press <enter> until the terminal displays the following prompt</enter>
"CHECKSALE, AMOUNT?"	Enter amount of sale (no need to press decimal).
"ENTER MICR NO/OR SWIPE CHECK"	Enter micr. numbers on bottom of check or swipe check through check reader. Terminal will then prompt for different information depending on your check processor. Enter necessary info.
"DIALING, PROCESSING, APPROVED"	Tear slip and have customer sign receipt.

RADIO TEST (NURIT 2070, 2090, 3010 only)

TERMINAL DISPLAY	ACTION
"CREDITSALE,	Press <menu esc=""> until the terminal displays the following prompt</menu>
ACCOUNT ?"	
"1. REPORTS	Press 6,
2. MERCH PARAMS	
3. MERCH OPTIONS	
4. HOST PARAMT"	
"1. RSSI"	Press 1
2. DISPLAY MAN	
3. RADIO INFO	
4. BATTERY TEST	
"RSSI: 25	The RSSI is the radio strength signal. Anything above a 7 is good, and
BASE STA: 0"	Base Station will always vary. Press <menu esc=""> to exit menu.</menu>

BATCHING / SETTLEMENT (NURIT 2060, 2070, 2080, 2085, 2090)

TERMINAL DISPLAY	ACTION
"CREDITSALE, ACCOUNT ?"	Press the <batch> key. Terminal will dial automatically.</batch>
"DIALING PROCESSING	Terminal will dial automatically, and print a detailed batch report. If anything other than a detailed batch report is obtained, contact your help desk.

BATCHING / SETTLEMENT (NURIT 3000 and 3010)

TERMINAL DISPLAY	ACTION
"CREDITSALE,	Press the <func> key.</func>
ACCOUNT ?"	
"CHOOSE A FUNCTION: "	Press <2>
5. REPORT 7. REVIEW	
6. BATCH 8.FIND	
Press <enter> to view the list of hot keys</enter>	
"DIALING	Terminal will dial and print detailed batch report. If anything other than a
PROCESSING	detailed batch report is obtained, contact your help desk.

NURIT TERMINAL QUICK REFERENCE GUIDE

COPY OF TRANSACTION RECEIPT

TERMINAL DISPLAY	ACTION
"CREDITSALE, ACCOUNT ?"	Press the <alpha> key.</alpha>
"RECEIPT COPY:" 1. LAST RECEIPT 2. ANY RECEIPT 3. LAST WITH SGNT (last receipt with signature)	Press the correct number needed.
"TRANSACTION # ?"	Enter transaction number and press <enter>.</enter>

SETTING DEFAULT REPORT

TERMINAL DISPLAY	ACTION
"CREDITSALE,	Press the <menu esc=""> key.</menu>
ACCOUNT ?"	
"MENU SCREEN:	Press <enter>.</enter>
1. REPORTS"	
"REPORTS:	Press <2>.
1. DEFAULT REPORT"	
"CURRENT REPORT:	Select the type of report by pressing the correct number.
1. CONDENSED REPORT"	
"CHOOSE EDC TYPE	Again, scroll through the different options, and press <enter> to make</enter>
1. ALL"	selection. Do this for all given options.
"SET CURRENT DEFAULTS	Select YES to save all options selected. Select NO to leave previous
ENTER=Y, ESC=N"	options selected.

ADDING TIPS (RESTAURANT/ BAR ONLY)

TERMINAL DISPLAY	ACTION
"CREDITSALE,	Press the <edit> key.</edit>
ACCOUNT ?"	
"EDIT TIP BY:	Scroll through the different options using the <forced> keys.</forced>
1. TRANSACTION #"	
Depending on option selected, terminal will prompt for different	Enter in the necessary information, and transaction will be displayed. If
information.	correct transaction, press <enter>.</enter>
"BASE AMOUNT X.XX	Press <enter>.</enter>
TIP AMOUNT 0.00"	
"TIP AMOUNT 0.00"	Enter tip amount and press <enter>.</enter>
"TIP AMOUNT X.XX	Terminal will display next transaction, or return to tip menu. Continue
TOTAL X.XX"	with same procedure.

FUNCTION KEY (NURIT 3000 and 3010 only)

TERMINAL DISPLAY	ACTION
"CREDITSALE,	Press the <function> key.</function>
ACCOUNT ?"	
"CHOOSE A FUNCTION	Press the number corresponding to the function needed:
1. REPORT 3. REVIEW	REPORT – will print a current (daily) report
2. BATCH 4. FIND	BATCH – will batch (settlement) transactions for the day
Press <enter> to see</enter>	REVIEW – will display totals for each EDC type, as well as individual
the list of hot keys	transactions if needed.
	FIND – will find a transaction by using last four digits of account number.
	ENTER> - will display hot keys.
Depending on option selected, terminal will prompt for different	Enter in the necessary information, and transaction will be displayed. If
information, or print a report.	correct transaction, press <enter>.</enter>

NURIT TERMINAL "MENU" QUICK REFERENCE GUIDE

To access the menu, press the *MENU/ESC>* key (this key will enter and exit out of the menu). Use the *RETURN>* and *FORCED>* keys to scroll up and down through menu options.

MAIN MENU <n></n>	SUB-MENU <n></n>	FUNCTION or ACTION
1. REPORTS	1. Default Report	Prints Programmed Default Report
	2. Current Report	Prints report of daily transactions with several options.
	3. History Report	Prints previous batch totals within the past 30 days.
	4. Display Transaction	Displays daily transactions by transaction number.
	5. Last Receipt	Prints Copy of the LAST transaction receipt
	6. Performance Report	Prints Approvals, Denials, Disconnects, Manuals, Swipes
	7. Report Setup	Gives option of printing Visa/MC separately or together
2. MERCHANT PARAMS	1 Authorization	Enables or disables different transaction / card types
	2 Security Level	Sets security levels for different operations
	3 Edit Header	Edits up to 5 line Header
	4 Edit Trailer	Edits up to 5 line Footer
	5 Set Cash EDC	Enable recording of Cash transactions
	6 Surcharge Rate	Enable Surcharge for a Debit transaction
	7 Set batch Time	Change batch Time for Host Auto Close mode
	8 Server ID & Invoice	Retail: Server and Invoice ontions Restaurant: Table No. and Guest
		View or change site ID
	3. Site iD	
	1 Papar Type	2 ply or 1 ply (two receipts are printed with 1 ply)
S. MERCHANT OF HONS	2 No Popor Modo	No Receipt Brinted
	2. No Faper Mode	Frable/disable tang when hitting keyboard keye
	3. Buzzer Set	Enable/disable tone when mitting keyboard keys
		4 Off 2 Dadie Only 2 Dadie Auto Off 4 Auto Off
	5. Ballery Saver	I-OII, 2-Radio OIIIy, 3-Radio+Adio OII, 4-Adio OII
	6. Print Disclaimer	
	7. Set Menu type	Autoscroli, Manual scroli
	8. Set Halo	Max.limit for a transaction (for sale or refund)
	9. Print Setup	Prints terminal setup
	1 Hosta Daramatara	Edit Marshant and/ar Terminal ID # a far all Haata yaad
4. HUST PARAMETERS	1. Hosts Parameters	Edite: 1. Credit 2. Debit 2. Check Heat Phone Numbers
		Printe heat information and outb/hatch phane numbers
	3. Plint EDC SETOP	Plints host montation and autividation phone numbers
	4. PIOLOCOI VEISION	Enables terminal to AutoDial to Batch out
5 SYSTEM OPTIONS	1 Set Time and Date	Sate Tarminal's Data (mm/dd/u/) and Time (bb:mm:00)
	2 Edit DIN Kov	Edit best processor working kov
	3 Sel Metr Key	Change Master Key location
	4 Set batch No	Change Ratch Number
	5 Edit Databasa	Void transaction. Clear database for selected EDC type
	6 Working Mode	Potoil Application: AVS option: Postouront Application: Tip options
	7 Test Mede	Retail Application. Av 5 option, Restaurant Application. The options
	7. Test Mode	Flogramming purposes only.
	0. Preular Call	In turned on, terminal will dial once card is swiped.
	9. Pin Pad Initialization	
	10. Pin Pad Function	Allows to encrypt working key into terminal
	11. Pin Pad Conliguration	Option to select internal or external Pin Pad
		Diamley ye reading received eigened etwas with
6. RADIO TEST		Displays radio received signal strength
	2. Host Radio Address	Displays the radio s MAN humber
	3. Radio information	Programming purposes only.
	4. Battery Test	
		Devertee de heet end mershent nevenetere
		Downloads hold and merchant parameters
	2. Autoload	Downloads full application and parameters
	3. Application Only	Downloads application only, no parameters
	4. Comm. Parameters	Sets communication parameters for downloading.
		Number of these the NUDIT will sell best server
8. COMMUNICATION		Number of times the NUKIT will call host processor
	2. Diai: I one	Sets pulse or tone (DIMF) dialing
	3. Exchange Prefix	Programs an exchange pretix before a number, if needed.
	4. Gateway	Programming purposes only
	5. Sutfix	Programs a suttix at the end of a number, if needed.
	6. Via Line/Radio	Enables both radio & phone, or phone only

	7. Check Line: OFF	Will tell terminal to either check or not check for dial tone
9. REMOTE DIAGNOSTIC	1.Start Diags.	Remote Diagnostic controlled by the Help Desk PC
	2. Set Comm. Prm.	Phone, Exchange Prefix, Via, Baud, Dial.
10. TRAINING MODE		Provides full or partial tutorial type training for installation of new terminals.